


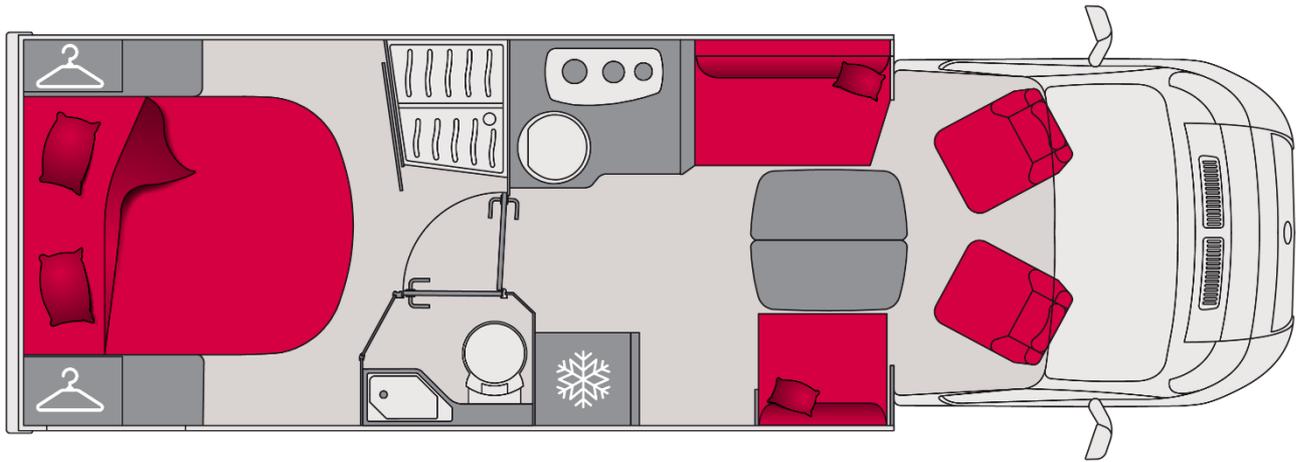

## Pilote P740 Evidence



## TECHNICAL DETAILS



Seat Belts 4

Berths 4

**Overall length** 7.400m

**Overall Height** 2.8m



**Overall Width** 2.3m

MTPLM 3500kg / 68.9cwt

Rear : Large Island double bed

Front Dinette area converts to a double bed  
1.9m x 1.3m Measured from the widest point

# PILOTE P740 COMMAND CONTROL PANEL

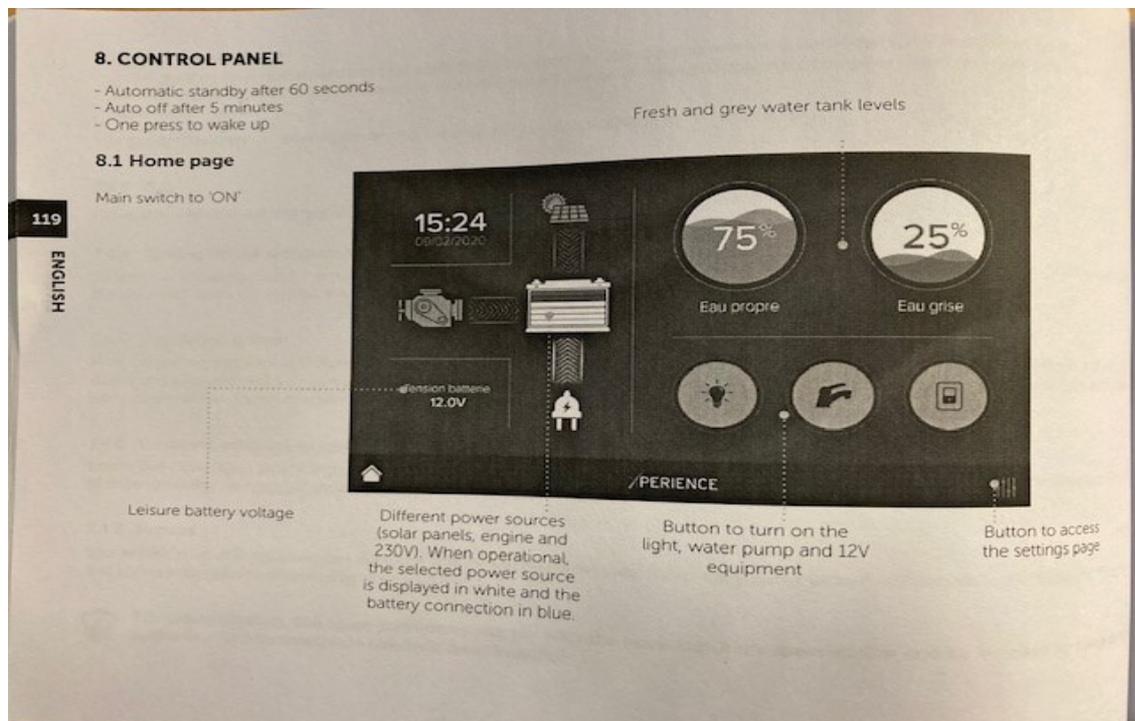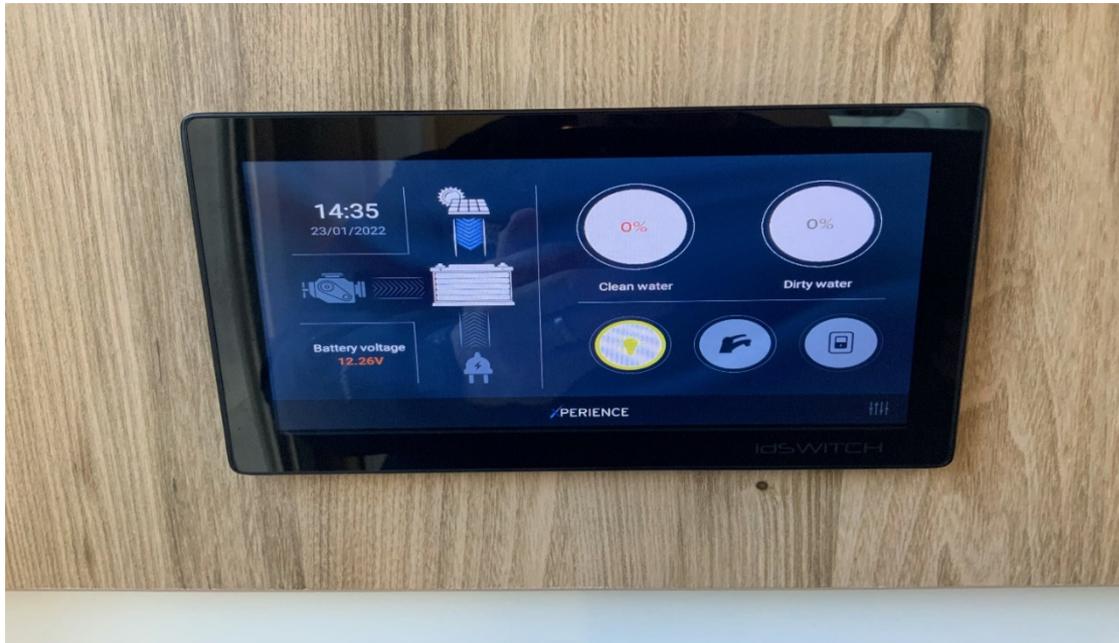

# TRAUMA HEATING AND WATER CONTROLS

The command panel powers the Motorhome, on entering the Motorhome push the main Black switch at the door, The panel will activate the screen has a touch screen, and you can Scroll

On entering the motorhome to Turn on the power pushing the BLACK Switch at the side of the door

This will turn on the Main control panel on the wall.

After turning on the power to the motorhome first select the source feeding the motorhome, this is done on the trauma panel below by scrolling to the GAS or ELECTRIC icon and selecting gas or electric. When the source has been selected it will be shown above the black line as a gas bottle or an electric Flash


The Trauma controls the power source to the Motorhome, and the heating and water temperature

Motorhome Heating will work off the 240 v Electric or the Gas (YOU DO NOT NEED THE WATER PUMP ON FOR THE HEATING)

Decide first if you are running the heating off Gas or Electric (if in a campsite preferably use the 240v supply)

If Gas Turn on the Gas Bottle, If Electric plug in the 240V supply

With the Gas or Electric now selected, **you can operate the Trauma panel by pushing the main button** until the panel lights up

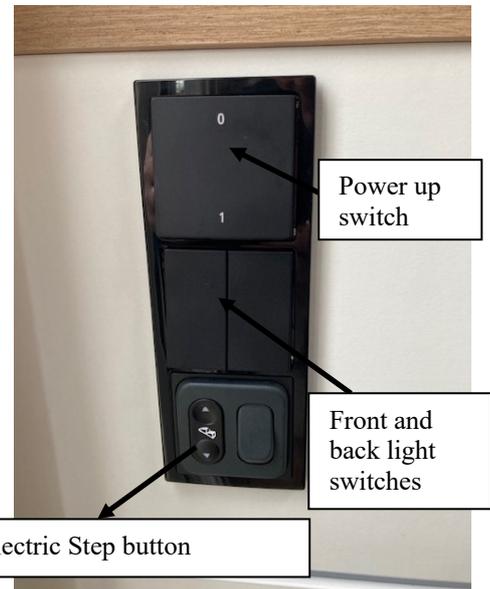

The first screen you will see is this →

Scroll to the third icon (GAS Bottle or Electric) push the button and scroll to the icon you are running the heating on. If running on Gas scroll to the gas bottle and push the button the gas bottle will appear above the line.

If running on Electric 240V select EL2 and push the button the electric sign will appear above the line.

**These are the only two choices you will Require**



NOW

Scroll back to the motorhome icon, this controls the heating in the motorhome, push the button and the icon flashes, turn the dial to the desired temperature, then push the button again.

The heating sign will appear above the line and will flash until the motorhome has reached the desired temperature.

NEXT


Scroll to the next icon: this is for the water temperature, on the icon push the button the icon flashes, turn the button you have the option of ECO, HOT and BOOST select one and push the Button the Temp icon will flash above the line until the water has reached the temperature required.

The 4th Icon is the fan scroll to this push the button and select fan speed push the button again.

**These are the only controls you will require on the Trauma Panel**

**Before you decide to move, turn the heating and Gas on the Trauma panel to OFF by scrolling to the motorhome and temperature icons push the button and turn until you see OFF and push the button then leave the system to cool down for 5 minutes before switching off the Gas or disconnecting the 240v supply**

# TRAUMA HEATING AND WATER INSTRUCTIONS

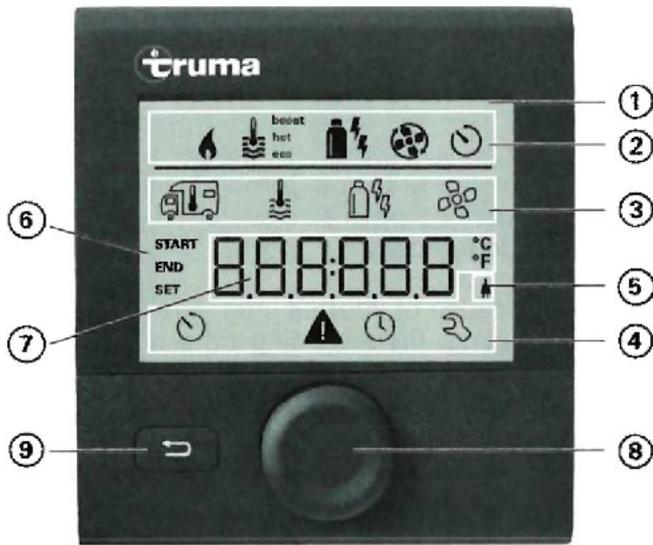

- |  |                        |
|--|------------------------|
| 1. Display                                     | 6. Time switch display |
| 2. Status line                                 | 7. Settings/values     |
| 3. Menu line (top)                             | 8. Rotary push button  |
| 4. Menu line (bottom)                          | 9. Back button         |
| 5. Power supply display 120 VAC (mains supply) |                        |

## Rotary push button

The rotary push button (8) is used to select and change set points and parameters; it is then tapped to save the values. Selected menu items flash.



### Turn clockwise

- The menu is scrolled through from left to right



### Turn counterclockwise

- The menu is scrolled through from right to left



### Tap

- Save a selected value
- Select a menu item on



### Press (3 seconds)

- Main switching function - control panel on/off

## Description

- A rotary push button(8) is used to select menu items in the menu lines (3 + 4) and to adjust settings.
- Information is shown on a backlit display (1).
- The Back button (9) is used to go back to a

## Back button

Press the Back button (9) to go back to a previous menu and cancel settings. This means that the previous values remain unchanged.

## Instructions for use


- If there is an interruption to the power supply, the clock has to be reset.
- If a new furnace is connected to the bus system of the control panel, repeat the procedure described in "Initial start-up".

# TRAUMA HEATING AND WATER INSTRUCTIONS

## Start-up

### Start/Stand-by screen


When the control panel is connected to the power supply, after a few seconds a start screen is displayed.

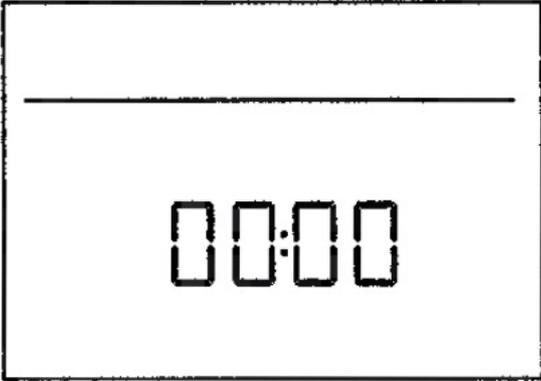

### Select setting level

- Tap the rotary push button (8).

The display shows the setting level. The first icon flashes.

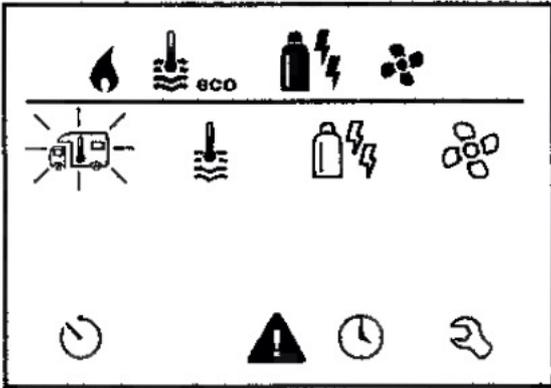



Change room temperature

- Use the rotary push button (8) to select the icon in the menu line (3).
- Tap the button to go to the setting level.
- Select the desired temperature with the rotary push button (8).
- Tap the rotary push button (8) to confirm



Select energy mode Gas or Electric

- Use the rotary push button to select the icon in the menu line
- Tap the button to go to the setting level.
- Select the desired energy mode with the rotary push button
- Tap the rotary push button to confirm the

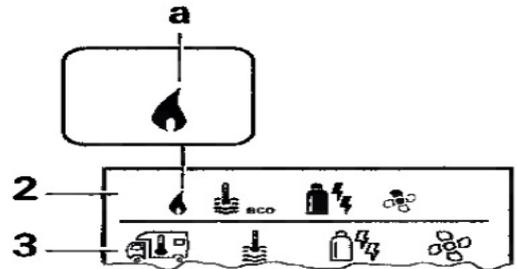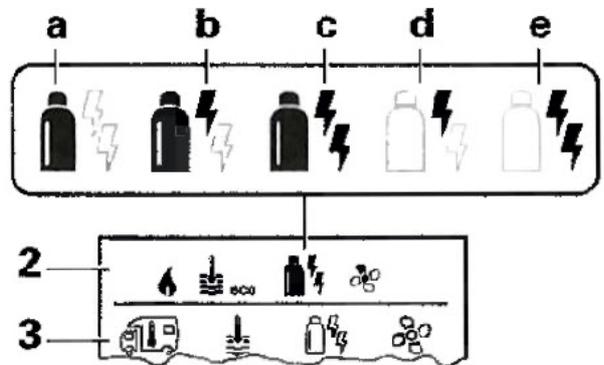

Change hot water level

- Use the rotary push button (8) to select the icon in the menu line (3).
- Tap the button to go to the setting level.
- Select the desired hot water level with the rotary push button (8).
- Tap the rotary push button (8) to confirm

# EXTERNAL



Diesel filler and add Blue (Use ignition Key)



Electric Step Operated by a Button Inside the door



Storage box with Electrical cable freshwater hose and Toilet chemical for toilet Cassette



Gas Bottle Storage, If no gas supply to the Motorhome make sure Main Valve Is Open



The rear Camera has two modes a Reversing Camera and a rear driver view when driving.

The Motorhome is Fitted with an Awning  
Any Damage to the Awning for any reason will be charged to the Hirer at Full Cost



The Awning must be secured at all times while in use with the securing pegs supplied  
During windy conditions and heavy rain, the Awning must be stored away to prevent damage

## EXTERNAL



240v electric hook up point



Toilet cassette



Fresh Water filling point

**Fresh water tank hold 100 liters while traveling tank should be no more than 50 liter's to prevent spillage into the Motorhome**



**Before removing the toilet, Cassette make sure the lever on the toilet is in the closed position. Do not try to force the cassette out, if the lever is in the correct position the cassette will slide out easily**



**Turn the Grey pipe and remove the blue cap to empty, once cleaned add one cap of the toilet chemical and 2L of water**

**Replace the cap and slide the cassette back into its locking position.**



Waste drain, under the motorhome

Rear Garage for storage.



All external locks are worked by the same key.

## INTERNAL SEATING AND DINING AREA



The seating Area converts into two traveling seats fitted with Seat belts

Large double island bed at the rear of the motorhome, Door to separate bedroom from front of Motorhome, fitted with Wardrobes and Storage under the Bed



Dinette Area converted into a double bed, Main seating is turned over, Dining table is lowered, and the infill cushions fitted as above

## TOILET AND SHOWER



Separate Shower



Before using the toilet, Slide the lever out to open the cassette flap, push the lever back in when finished.

**Do not move Lever while sitting on the toilet.**

Electric push Button to Flush toilet

## KITCHEN AREA



Kitchen area is fully equipped with plates cups pots and pans a kettle and cutlery various cooking utensils.

Locking drawers for cutlery and pans and various cooking utensils



Dometic Electronic Fridge Freezer

The fridge has a digital push button control panel that can be used to select a source automatically or manually.

Battery if driving, Gas , Electric if plugged in to a 240v supply.

To select the source, push the arrow to the required source.

Push the button to set fridge Temperature.

The fridge will ignite when the power button is pushed

# BLINDS



The side door blinds are lifted and held in place by small magnets onto the door

The windscreen blind is pulled up from dashboard height

**Any Damage to the Blinds will be charged in Full**



All windows are Fitted with Blinds and Fly Screens



Adjustable TV



**Below is a list of Miscellaneous charges that may be charged if the Motorhome is not returned in accordance with the returns Policy.**

<b>Smoking in the Motorhome</b>	<b>£300.00</b>
<b>Unauthorised Pets in the Motorhome</b>	<b>£150.00</b>
<b>Pet hair left in the Motorhome</b>	<b>£100.00.</b>
<b>Unclean Bathroom</b>	<b>£100.00</b>
<b>Unclean Toilet</b>	<b>£100.00</b>
<b>Unclean habitation Area (Hob /Oven etc)</b>	<b>£100 - £150</b>
<b>Unemptied / Dirty, Toilet cassette</b>	<b>£50.00</b>
<b>Fridge / Cupboards, not emptied</b>	<b>£50.00</b>
<b>Late Return</b>	<b>£50/ hr or part thereof for first 3 hours, then balance of the security deposit together with any additional costs incurred by AMR</b>

**Any Damages/breakages found during the Vehicles return Inspection and cleaning will be charged accordingly, with an admin fee of £25.00**